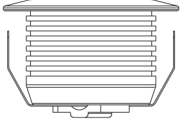
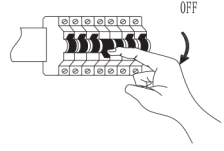

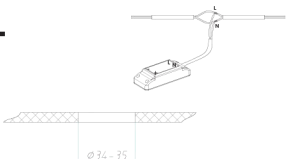
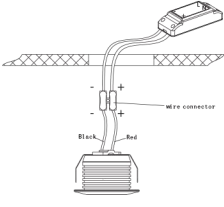

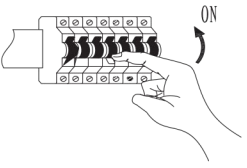


INSTALLATION INSTRUCTIONS

<p>1</p> 	<p>2</p>  <p>OFF</p>
<p>3</p>  <p>Put the driver first before installation</p>	
<p>4</p>  <p>Put the driver's L/N bare copper wire on the main L/N, please use the rubberized fabric protect the inside wire (It has two group). Also use the rubberized fabric protect the outside wire.</p>	<p>5</p>  <p>Wire connector</p> <p>Black Red</p>
<p>6</p>  <p>i</p>	<p>7</p>  <p>ON</p>